

Desktop Management Guide

Business PCs



© Copyright 2006 Hewlett-Packard Development Company, L.P. The information contained herein is subject to change without notice.

Microsoft and Windows are trademarks of Microsoft Corporation in the U.S. and other countries.

Intel and vPro are trademarks of Intel Corporation in the U.S. and other countries.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

This document contains proprietary information that is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company.

Desktop Management Guide

Business PCs

First Edition (May 2005)

Second Edition (August 2006)

Document Part Number: 391759-002

About This Book

This guide provides definitions and instructions for using security and Intelligent Manageability features that are preinstalled on some models.



WARNING! Text set off in this manner indicates that failure to follow directions could result in bodily harm or loss of life.



CAUTION Text set off in this manner indicates that failure to follow directions could result in damage to equipment or loss of information.



NOTE Text set off in this manner provides important supplemental information.

Table of contents

Desktop Management Guide

Initial Configuration and Deployment	1
HP OpenView (Radia)	2
Altiris Deployment Solution Agent	2
HP Backup and Recovery Manager	3
Remote System Installation	4
Software Updating and Management	4
HP Client Management Interface	4
HP System Software Manager	5
HP Client Manager	5
HP ProtectTools Security Manager	6
HP Client Management Premium Suite	6
HP Client Foundation Suite	7
HP OpenView Client Configuration Manager	7
HP OpenView Management Suite for Desktops Using Radia	7
Intel vPro-branded PCs with Active Management Technology	8
Proactive Change Notification	10
Subscriber's Choice	10
Retired Solutions	10
ROM Flash	10
Remote ROM Flash	11
HPQFlash	11
Boot Block Emergency Recovery Mode	11
Replicating the Setup	12
Copying to Single Computer	12
Copying to Multiple Computers	13
Creating a Bootable Device	14
Supported USB Flash Media Device	14
Unsupported USB Flash Media Device	15
Dual-State Power Button	17
HP Web Site Support	17
Industry Standards	17
Asset Tracking and Security	18
Password Security	20
Establishing a Setup Password Using Computer Setup	20
Establishing a Power-On Password Using Computer Setup	20
Entering a Power-On Password	21
Entering a Setup Password	21
Changing a Power-On or Setup Password	22
Deleting a Power-On or Setup Password	22

National Keyboard Delimiter Characters	23
Clearing Passwords	23
DriveLock	23
Using DriveLock	23
DriveLock Applications	24
Smart Cover Sensor	25
Setting the Smart Cover Sensor Protection Level	25
Smart Cover Lock	25
Locking the Smart Cover Lock	26
Unlocking the Smart Cover Lock	26
Using the Smart Cover FailSafe Key	26
Cable Lock Provision	27
Fingerprint Identification Technology	27
Fault Notification and Recovery	27
Drive Protection System	27
Surge-Tolerant Power Supply	27
Thermal Sensor	27

Index	29
--------------------	-----------

Desktop Management Guide

HP Client Management Solutions provides standards-based solutions for managing and controlling desktops, workstations, and notebook PCs in a networked environment. HP pioneered desktop manageability in 1995 with the introduction of the industry's first fully manageable desktop personal computers. HP is a patent holder of manageability technology. Since then, HP has led an industry-wide effort to develop the standards and infrastructure required to effectively deploy, configure, and manage desktops, workstations, and notebook PCs. HP develops its own management software and works closely with leading management software solution providers in the industry to ensure compatibility between HP Client Management Solutions and these products. HP Client Management Solutions are an important aspect of our broad commitment to providing you with solutions that assist you in lowering the total cost of owning and maintaining the PCs throughout their lifecycle.

The key capabilities and features of desktop management are:

- Initial configuration and deployment
- Remote system installation
- Software updating and management
- ROM flash
- Asset tracking and security
- Fault notification and recovery



NOTE Support for specific features described in this guide may vary by model or software version.

Initial Configuration and Deployment

The computer comes with a preinstalled system software image. After a brief software “unbundling” process, the computer is ready to use.

You may prefer to replace the preinstalled software image with a customized set of system and application software. There are several methods for deploying a customized software image. They include:

- Installing additional software applications after unbundling the preinstalled software image.
- Using software deployment tools, such as HP OpenView Client Configuration Manager, HP OpenView Configuration Management Solutions Radia OS Manager, or Altiris Deployment Solution, to replace the preinstalled software with a customized software image.
- Using a disk cloning process to copy the contents from one hard drive to another.

The best deployment method depends on your information technology environment and processes. The PC Deployment section of the HP Lifecycle Service Web site (<http://h20219.www2.hp.com/services/cache/80906-0-0-225-121.html>) provides information to help you select the best deployment method.

The *Restore Plus!* CD, ROM-based setup, and ACPI hardware provide further assistance with recovery of system software, configuration management and troubleshooting, and power management.



NOTE See [HP Backup and Recovery Manager](#) for information on creating the *Restore Plus!* CD.

HP OpenView (Radia)

The management agent used by both HP OpenView Client Configuration Manager and HP OpenView Configuration Management solutions is pre-loaded on the computer. When installed, it enables communication with the HP OpenView management console.

To install the Radia Management Agent:

1. Click **Start**.
2. Click **All Programs**.
3. Click **HP Manageability**.
4. Click **Radia Management Agent Readme**.
5. Review and follow the instructions contained in the Readme file to install the Radia Management Agent.

The Radia Management Agent is a key infrastructure component for enabling all of the HP OpenView Configuration Management Solutions. To learn about the other infrastructure components necessary for implementing the HP OpenView Configuration Management Solutions, please visit http://managementsoftware.hp.com/products/radia_mdsk/index.html.

Altiris Deployment Solution Agent

This program is pre-loaded on the computer. When installed, it enables communication with the administrator Deployment Solution console.

To install Altiris Deployment Solution Agent:

1. Click **Start**.
2. Click **All Programs**.
3. Click **Software Setup**.
4. Click **Next**.
5. Scroll down and click on the link to install Altiris AClient.

The Altiris Deployment Solution Agent is a key infrastructure component for enabling the HP Client Foundation Suite and the Client Premium Suite. To learn about the other infrastructure components necessary for implementing the HP Client Foundation Suite and Client Premium Suite, please visit www.hp.com/go/easydeploy.

HP Backup and Recovery Manager



CAUTION HP no longer ships the *Restore Plus!* CD set with PCs. Instead, HP Backup and Recovery Manager is pre-loaded on each system. HP recommends that you create a recovery CD set as soon as you have set up the new computer. Creating the *Restore Plus!* CD set is important in the event that you ever need to restore the system hard drive to its factory installed state.

HP Backup and Recovery Manager can create the *Restore Plus!* CD set. This set includes the *Restore Plus!* CD, the Operating System CD, and any Supplemental Software CDs.



CAUTION The *Restore Plus!* CD set will not include any system settings or user data created after the initial system setup.

To create the *Restore Plus!* CD set:

1. Click **Start > HP Backup and Recovery > HP Backup and Recovery Manager** to open the Backup and Recovery Wizard, then click **Next**.
2. Select **Create factory software recovery CDs or DVDs to recover the system**.
3. Follow the instructions in the wizard.

In addition to allowing you to create the *Restore Plus!* CD set, HP Backup and Recovery Manager can be used to back up data and system files to the hard drive, to network drives, or to removable media, such as CDs, DVDs, or flash media. If data or system files are lost, deleted, or corrupted, Backup and Recovery Manager allows you to retrieve data or restore the last good system image.



CAUTION HP recommends that a backup schedule be created immediately to ensure continued system and data protection. Automatic backups can be scheduled using the HP Backup and Recovery Manager Wizard. Recovery Points, Entire Drive Backups, and File Backups can be automatically backed up without user intervention. HP recommends scheduling Recovery Point Backups to provide the most comprehensive coverage.



NOTE If HP Backup and Recovery Manager is preinstalled, the *Restore Plus!* CD set and the initial recovery point may be saved to disc as often as necessary, but only a single copy of the Microsoft Windows CD can be created, due to licensing constraints.

You can access a user manual at **Start > HP Backup and Recovery > HP Backup and Recovery Manager Manual**. We suggest that you print this document for easy reference in case of future emergency.

If **Create factory software recovery CDs or DVDs to recover the system** is unavailable on your system, the HP *Restore Plus!* CD set can be obtained through product support on http://welcome.hp.com/country/us/en/contact_us.html.

Remote System Installation

Remote System Installation allows you to start and set up the system using the software and configuration information located on a network server by initiating the Preboot Execution Environment (PXE). The Remote System Installation feature is usually used as a system setup and configuration tool, and can be used for the following tasks:

- Formatting a hard drive
- Deploying a software image on one or more new PCs
- Remotely updating the system BIOS in flash ROM ([Remote ROM Flash](#))
- Configuring the system BIOS settings

To initiate Remote System Installation, press **F12** when the **F12 = Network Service Boot** message appears in the lower-right corner of the HP logo screen when the computer is booting up. Follow the instructions on the screen to continue the process. The default boot order is a BIOS configuration setting that can be changed to always attempt to PXE boot.

Software Updating and Management

HP provides several tools for managing and updating software on desktops, workstations, and notebooks:

- HP System Software Manager
- HP Client Manager
- HP ProtectTools Security Manager
- HP Client Management Premium Suite
- HP Client Foundation Suite
- HP OpenView Client Configuration Manager
- HP OpenView Management Suite for Desktops using Radia
- HP Proactive Change Notification
- HP Subscriber's Choice

HP Client Management Interface

Regardless of the system management tools your IT department uses, managing both your hardware and software assets is important to keeping your IT costs low and your business agile.

With the HP Client Management Interface (HP CMI), new HP business computers seamlessly integrate into your managed IT environment. HP CMI provides an interface that simplifies the integration of HP business computers with popular industry system management tools (including Microsoft Systems Management Server, IBM Tivoli Software, and HP OpenView Operations) and custom inhouse developed management applications. Using HP CMI, systems management tools and applications can request in-depth client inventory, receive health status information, and manage system BIOS settings by communicating directly with the client computer, reducing the need for agent or connector software to achieve integration.

HP Client Management Interface is based on industry standards that include Microsoft Windows Management Interface (MS WMI), Web-Based Enterprise Management (WBEM), System Management BIOS (SMBIOS), and Advanced Configuration and Power Interface (ACPI). HP CMI is a foundation technology utilized in HP Client Management Solutions. With HP CMI, HP gives you flexibility in choosing how you manage your HP client computers.

HP Client Management Interface used in conjunction with system management software can:

- Request in-depth client inventory information—Capture detailed information about the processors, hard drives, memory, BIOS, drivers, including sensor information (such as fan speed, voltage, and temperature)
- Receive health status information—Subscribe for a wide range of client hardware alerts (such as over-temperature, fan stall, and hardware configuration changes) to be sent to the system management console, application, or to the local client computer. Alerts are sent real-time when triggered by hardware events.
- Manage system BIOS settings—Perform F10 functions including setting and changing the BIOS passwords and computer boot order remotely from your system management console on any or all of your client systems without having to visit each machine.

HP System Software Manager

HP System Software Manager (SSM) is a free utility that automates remote deployment of device drivers and BIOS updates for your networked HP business PCs. When SSM runs, it silently (without user interaction) determines the revision levels of drivers and BIOS installed on each networked client system and compares this inventory against system software SoftPaqs that have been tested and stored in a central file store. SSM then automatically updates any down-revision system software on the networked PCs to the later levels available in the file store. Since SSM only allows distribution of SoftPaq updates to the correct client system models, administrators can confidently and efficiently use SSM to keep system software updated.

System Software Manager integrates with enterprise software distribution tools such as HP OpenView Management Suite using Radia and Microsoft Systems Management Server (SMS). Using SSM, you can distribute customer-created or third-party updates that have been packaged in the SSM-format.

SSM may be downloaded at no charge by visiting www.hp.com/go/ssm.

HP Client Manager

HP Client Manager, developed with Altiris, is available free for all supported HP business desktop, notebook, and workstation models. SSM is integrated into HP Client Manager, and enables central tracking, monitoring, and management of the hardware aspects of HP client systems.

Use HP Client Manager to:

- Get valuable hardware information such as CPU, memory, video, and security settings
- Monitor system health to fix problems before they occur
- Automatically acquire and install drivers and BIOS updates without visiting each PC
- Remotely configure BIOS and security settings
- Automate processes to quickly resolve hardware problems

Tight integration with HP Instant Support tools reduces hardware troubleshooting time.

- Diagnostics—remotely run & view reports on HP desktop, notebook, and workstation models
- System Health Scan—check for known hardware issues in your installed base of HP client systems
- Active Chat—connect to HP customer support to resolve issues
- HP Knowledgebase—link to expert information
- Automated SoftPaq collection and delivery process for fast resolution of hardware problems
- Identify, inventory, and initialize systems with HP ProtectTools embedded security chip
- Option for health alerts to display locally on the client system
- Report basic inventory information for non-HP clients

For more information on HP Client Manager, visit www.hp.com/go/clientmanager.

HP ProtectTools Security Manager

ProtectTools Security Manager software provides security features that help protect against unauthorized access to the computer, networks, and critical data. Enhanced security functionality is provided by the following modules:

- Smart Card Security for ProtectTools
- Embedded Security for ProtectTools
- BIOS Configuration for ProtectTools
- Credential Manager for ProtectTools

The modules available for your computer may vary depending on your model. For example, Embedded Security for ProtectTools requires that the Trusted Platform Module (TPM) embedded security chip (some models only) be installed on your computer, and Smart Card Security for ProtectTools requires an optional smart card and reader.

ProtectTools modules may be preinstalled, preloaded, or available for purchase from the HP Web site. Visit <http://www.hp.com/products/security> for more information.

HP Client Management Premium Suite

HP Client Premium Suite (HP CPS) is designed for organizations wanting full client hardware and software lifecycle management from a single, Web-based management console. It combines:

- HP Client Manager
- HP Systems Insight Manager Connector
- HP OpenView Connector
- Altiris Client Manager Suite - Level 1
- Altiris Connector Solution
- Altiris Local Recovery Pro
- Altiris AuditExpress

For more information on HP Client Management Premium Suite, visit www.hp.com/go/easydeploy.

HP Client Foundation Suite

The HP Client Foundation Suite (HP CFS) is designed for organizations wanting essential client management functionality. It combines:

- HP Client Manager
- HP Systems Insight Manager Connector
- Altiris Migration Suite
- Altiris Local Recovery Pro

For more information about the HP Client Foundation Suite, visit <http://www.hp.com/go/easydeploy>.

HP OpenView Client Configuration Manager

The HP OpenView Client Configuration Manager is a simplified, out-of-the-box, and easy-to-use solution that solves immediate PC software configuration management needs.

- Identification of hardware and software Inventory
- Automated patch management
- Software distribution to both local and mobile clients

For more information about the HP OpenView Client Configuration Manager, visit <http://www.managementsoftware.hp.com/products/ccm/index.html>.

HP OpenView Management Suite for Desktops Using Radia

HP OpenView Management Suite for Desktops using Radia is highly scalable, policy-based change and configuration management software that enables administrators to efficiently and reliably inventory, deploy, and maintain software and content across heterogeneous desktop platforms from a web-based console.

HP OpenView Management Suite for Desktops using Radia ensures availability of desktop applications and that the operating systems, applications, and content that employees, partners, or customers need are 100% right, all the time.

HP OpenView Management Suite for Desktops using Radia is proven by enterprise customers around the world to deliver greater than 99% deployment reliability in highly complex and large-scale IT environments. It automates change management, resulting in dramatic IT cost savings, accelerated time-to-market for software and content, and increased user productivity and satisfaction.

HP OpenView Management Suite for Desktops using Radia enables IT professionals to:

- Collect hardware and software inventory across multiple platforms
- Prepare an application package and conduct impact analysis prior to distribution
- Target individual desktops, workgroups, or entire populations of desktops for deployment and maintenance of software and content according to policies
- Provision and manage operating systems, applications, and content on distributed desktop computers from any location

- Manage operating system security patches and ensure compliance with IT security standards
- Collect and report on software usage
- Remotely control a PC
- Integrate with HP OpenView Service Desk and other help desk and system management tools
- Leverage a common infrastructure for management of software and content on virtually any device, any platform, and any network for all enterprise users
- Scale to meet enterprise needs

HP OpenView Management Suite for Desktops using Radia is offered as a stand-alone solution and is also fully integrated with other HP OpenView Management Suite using Radia products as an essential component of HP's unique desired-state management approach, which provides automated and ongoing maintenance of all software residing on enterprise computing devices. The HP OpenView Management Suite using Radia products ensure that the entire software infrastructure is always in its desired state—up-to-date, reliable, and secure.

For more information on HP OpenView Management Suite for Desktops using Radia, visit http://managementsoftware.hp.com/products/radia_mdsk/index.html.

Intel vPro-branded PCs with Active Management Technology

Intel Active Management Technology (AMT) allows better discovery, healing, and protection of networked computing assets. With AMT, PCs can be managed whether the system is on, off, or the operating system is hung.

Intel vPro features include:

- Hardware inventory information
- Alerting
- Power management—power on/off, cycle power
- Remote diagnosis and repair
 - Serial-over-LAN—allows console control of remote PC
 - IDE-Redirect—allows system booting from a remote boot drive, disk, or ISO image
- Hardware-based isolation and recovery—limit or cut off PC network access, if virus-like activity is detected



NOTE For an overview of Intel vPro technology, visit <http://www.intel.com/vpro>.

For HP-specific information on Intel vPro technology, see the white papers at <http://www.hp.com/support>. Select your country and language, select **See support and troubleshooting information**, enter the model number of the computer, and press **Enter**. In the **Resources** category, click **Manuals (guides, supplements, addendums, etc)**. Under **Quick jump to manuals by category**, click **White papers**.

On Intel vPro-branded PCs, available management technologies include the following:

- AMT
- ASF
- Virtualization Technology (VT)

ASF and AMT may not be configured at the same time, but both are supported.

To configure Intel vPro systems for AMT or ASF:

1. Turn on or restart the computer. If you are in Microsoft Windows, click **Start > Shut Down > Restart**.
2. As soon as the computer is turned on, press the hot key, **Ctrl+P**, when the monitor light turns green.



NOTE If you do not press **Ctrl+P** at the appropriate time, you must restart the computer and again press **Ctrl+P** when the monitor light turns green to access the utility.

This hot-key enters the Intel Management Engine BIOS Execution (ME Bx) setup utility. This utility allows the user to configure various aspects of the management technology. Configuration options include:

- ME Platform Configuration
 - ME Platform State Control—enable/disable management engine
 - ME Firmware Local Update—local enable/disable management of firmware updates
 - LAN Controller—enable/disable integrated network controller
 - ME Features Control—enable AMT, ASF, or none
 - ME Power Control—configure management engine power policies
- Intel AMT Configuration
 - Change AMT Password—required in order to configure AMT (the default password is **admin**)
 - Host Name—allows administrator to assign a name to the client
 - TCP/IP—allows administrator to assign an IP address or enable DHCP
 - Provisioning Server—allows administrator to assign IP address of provisioning server
 - Provision Model—allows administrator to configure either enterprise or SMB mode
 - Set PID and PPS—allows administrator to provide pre-provisioning key (see HP's white paper, *Intel vPro Provisioning*)
 - Un-Provision—allows administrator to reset AMT configuration to factory defaults
 - VLAN—allows administrator to enable LAN virtualization support
 - SOL/IDE-R—allows administrator to enable remote boot and control sessions
- Change MEBx Password (HP highly recommends that this password be changed. The default password is **admin**.)

In order to remotely manage AMT systems, the administrator must use a remote console that supports AMT. Enterprise management consoles are available from suppliers such as HP OpenView, Altiris and Microsoft SMS. In SMB mode, the client provides a Web browser interface. To access this feature, open a browser from any other system on the network and enter `http://host_name:16992` where `host_name` is the name assigned to the system. Alternatively, the IP address may be used in place of the host name.

Proactive Change Notification

The Proactive Change Notification program uses the Subscriber's Choice Web site in order to proactively and automatically:

- Send you Proactive Change Notification (PCN) e-mail informing you of hardware and software changes to most commercial computers and servers, up to 60 days in advance
- Send you e-mail containing Customer Bulletins, Customer Advisories, Customer Notes, Security Bulletins, and Driver alerts for most commercial computers and servers

You create your own profile to ensure that you only receive the information relevant to a specific IT environment. To learn more about the Proactive Change Notification program and create a custom profile, visit <http://h30046.www3.hp.com/subhub.php>

Subscriber's Choice

Subscriber's Choice is a client-based service from HP.

Based on your profile, HP will supply you with personalized product tips, feature articles, and/or driver and support alerts/notifications.

Subscriber's Choice Driver and Support Alerts/Notifications will deliver e-mails notifying you that the information you subscribed to in your profile is available for review and retrieval. To learn more about Subscriber's Choice and create a custom profile, visit <http://h30046.www3.hp.com/subhub.php>.

Retired Solutions

Two software packages, Altiris Local Recovery, and Dantz Retrospect, will no longer be shipping on HP business desktops, notebooks, or workstations. Starting with new business desktops, notebooks, and workstations released in 2006, all will ship with HP Backup and Recovery Manager.

ROM Flash

The computer's BIOS is stored in a programmable flash ROM (read only memory). By establishing a setup password in the Computer Setup (F10) Utility, you can protect the ROM from being unintentionally updated or overwritten. This is important to ensure the operating integrity of the computer. Should you need or want to upgrade the BIOS, you may download the latest BIOS images from the HP driver and support page, <http://www.hp.com/support/files>.



CAUTION For maximum ROM protection, be sure to establish a setup password. The setup password prevents unauthorized ROM upgrades. System Software Manager allows the system administrator to set the setup password on one or more PCs simultaneously. For more information, visit <http://www.hp.com/go/ssm>.

Remote ROM Flash

Remote ROM Flash allows the system administrator to safely upgrade the BIOS on remote HP computers directly from the centralized network management console. Enabling the system administrator to perform this task remotely on multiple computers results in a consistent deployment of, and greater control over, HP PC BIOS images over the network. It also results in greater productivity and lower total cost of ownership.



NOTE The computer must be powered on, or turned on through Remote Wakeup, to take advantage of Remote ROM Flash.

For more information on Remote ROM Flash, refer to the HP Client Manager Software or System Software Manager at <http://h18000.www1.hp.com/im/prodinfo.html>.

HPQFlash

The HPQFlash utility is used to locally update or restore the system BIOS of individual PCs from a Windows operating system.

For more information on HPQFlash, visit <http://www.hp.com/support/files> and enter the model number of the computer when prompted.

Boot Block Emergency Recovery Mode

Boot Block Emergency Recovery Mode permits system recovery in the unlikely event of a ROM flash failure. For example, if a power failure were to occur during a BIOS upgrade, the ROM flash would be incomplete. This would render the system BIOS unusable. The Boot Block is a flash-protected section of the ROM that contains code that checks for a valid system BIOS image when the system is turned on.

- If the system BIOS image is valid, the system starts normally.
- If the system BIOS image is not valid, a failsafe Boot Block BIOS provides enough support to
 - search removable media for BIOS image files. If an appropriate BIOS image file is found, it is automatically flashed into the ROM.
 - start the system from bootable removable media that automatically invokes system BIOS upgrade utilities.

When an invalid system BIOS image is detected, the system power LED will blink red 8 times, one blink every second. Simultaneously, the speaker will beep 8 times. If the portion of the system ROM containing the video option ROM image is not corrupt, **Boot Block Emergency Recovery Mode** will be displayed on the screen.

To recover the system after it enters Boot Block Emergency Recovery Mode, complete the following steps:

1. Turn off the power.
2. Insert a diskette, CD, or USB flash device containing the desired BIOS image file in the root directory.



NOTE The media must be formatted using the FAT12, FAT16, or FAT32 file system.

3. Turn on the computer.

If no appropriate BIOS image file is found, the failsafe Boot Block BIOS will attempt to start the system from a bootable device. If no bootable device is found, you will be prompted to insert media containing a BIOS image file or BIOS upgrade utility.

If the system successfully reprograms the ROM, the system will automatically power off.

4. Remove the removable media used to upgrade the BIOS.
5. Turn the power on to restart the computer.

Replicating the Setup

The following procedures give an administrator the ability to easily copy one setup configuration to other computers of the same model. This allows for faster, more consistent configuration of multiple computers.



NOTE Both procedures require a diskette drive or a supported USB flash media device, such as an HP Drive Key.

Copying to Single Computer



CAUTION A setup configuration is model-specific. File system corruption may result if source and target computers are not the same model. For example, do not copy the setup configuration from a dc7xxx PC to a dx7xxx PC.

1. Select a setup configuration to copy. Turn off the computer. If you are in Windows, click **Start > Shut Down > Shut Down**.
2. If you are using a USB flash media device, insert it now.
3. Turn on the computer.
4. As soon as the computer is turned on, press **F10** when the monitor light turns green to enter Computer Setup. Press **Enter** to bypass the title screen, if necessary.



NOTE If you do not press **F10** at the appropriate time, you must restart the computer and again press **F10** when the monitor light turns green to access the utility.

5. If you are using a diskette, insert it now.
6. Click **File > Replicated Setup > Save to Removable Media**. Follow the instructions on the screen to create the configuration diskette or USB flash media device.
7. Turn off the computer to be configured and insert the configuration diskette or USB flash media device.
8. Turn on the computer to be configured.
9. As soon as the computer is turned on, press **F10** when the monitor light turns green to enter Computer Setup. Press **Enter** to bypass the title screen, if necessary.

10. Click **File > Replicated Setup > Restore from Removable Media**, and follow the instructions on the screen.
11. Restart the computer when the configuration is complete.

Copying to Multiple Computers



CAUTION A setup configuration is model-specific. File system corruption may result if source and target computers are not the same model. For example, do not copy the setup configuration from a dc7xxx PC to a dx7xxx PC.

This method takes a little longer to prepare the configuration diskette or USB flash media device, but copying the configuration to target computers is significantly faster.



NOTE A bootable diskette is required for this procedure or to create a bootable USB flash media device. If Windows XP is not available to use to create a bootable diskette, use the method for copying to a single computer instead (see [Copying to Single Computer](#)).

1. Create a bootable diskette or USB flash media device. See [Supported USB Flash Media Device](#) or [Unsupported USB Flash Media Device](#).



CAUTION Not all computers can be booted from a USB flash media device. If the default boot order in the Computer Setup (F10) Utility lists the USB device before the hard drive, the computer can be booted from a USB flash media device. Otherwise, a bootable diskette must be used.

2. Select a setup configuration to copy. Turn off the computer. If you are in Windows, click **Start > Shut Down > Shut Down**.
3. If you are using a USB flash media device, insert it now.
4. Turn on the computer.
5. As soon as the computer is turned on, press **F10** when the monitor light turns green to enter Computer Setup. Press **Enter** to bypass the title screen, if necessary.



NOTE If you do not press **F10** at the appropriate time, you must restart the computer and again press **F10** when the monitor light turns green to access the utility.

6. If you are using a diskette, insert it now.
7. Click **File > Replicated Setup > Save to Removable Media**. Follow the instructions on the screen to create the configuration diskette or USB flash media device.
8. Download a BIOS utility for replicating setup (repset.exe) and copy it onto the configuration diskette or USB flash media device. To obtain this utility, go to tap/welcome.hp.com/support/files and enter the model number of the computer.
9. On the configuration diskette or USB flash media device, create an autoexec.bat file containing the following command:

```
repset.exe
```

10. Turn off the computer to be configured. Insert the configuration diskette or USB flash media device and turn the computer on. The configuration utility will run automatically.
11. Restart the computer when the configuration is complete.

Creating a Bootable Device

Supported USB Flash Media Device

Supported devices have a preinstalled image to simplify the process of making them bootable. All HP or Compaq and most other USB flash media devices have this preinstalled image. If the USB flash media device being used does not have this image, use the procedure later in this section (see [Unsupported USB Flash Media Device](#)).

To create a bootable USB flash media device, you must have:

- a supported USB flash media device
- a bootable DOS diskette with the FDISK and SYS programs (If SYS is not available, FORMAT may be used, but all existing files on the USB flash media device will be lost.)
- a PC that is bootable from a USB flash media device



CAUTION Some older PCs may not be bootable from a USB flash media device. If the default boot order in the Computer Setup (F10) Utility lists the USB device before the hard drive, the computer can be booted from a USB flash media device. Otherwise, a bootable diskette must be used.

1. Turn off the computer.
2. Insert the USB flash media device into one of the computer's USB ports and remove all other USB storage devices except USB diskette drives.
3. Insert a bootable DOS diskette with FDISK.COM and either SYS.COM or FORMAT.COM into a diskette drive and turn on the computer to boot to the DOS diskette.
4. Run FDISK from the **A:** prompt by typing `FDISK` and pressing Enter. If prompted, click **Yes (Y)** to enable large disk support.
5. Enter Choice [5] to display the drives in the system. The USB flash media device will be the drive that closely matches the size of one of the drives listed. It will usually be the last drive in the list. Note the letter of the drive.

USB flash media device drive: _____



CAUTION If a drive does not match the USB flash media device, do not proceed. Data loss can occur. Check all USB ports for additional storage devices. If any are found, remove them, reboot the computer, and proceed from step 4. If none are found, either the system does not support the USB flash media device or the USB flash media device is defective. **DO NOT** proceed in attempting to make the USB flash media device bootable.

6. Exit FDISK by pressing the **Esc** key to return to the **A:** prompt.
7. If your bootable DOS diskette contains SYS.COM, go to step 8. Otherwise, go to step 9.
8. At the **A:** prompt, enter `SYS x:` where x represents the drive letter noted above.



CAUTION Be sure that you have entered the correct drive letter for the USB flash media device.

After the system files have been transferred, SYS will return to the **A:** prompt. Go to step 13.

9. Copy any files you want to keep from your USB flash media device to a temporary directory on another drive (for example, the system's internal hard drive).
10. At the **A:** prompt, enter `FORMAT /S X:` where **X** represents the drive letter noted before.



CAUTION Be sure that you have entered the correct drive letter for the USB flash media device.

FORMAT will display one or more warnings and ask you each time whether you want to proceed. Enter **Y** each time. FORMAT will format the USB flash media device, add the system files, and ask for a Volume Label.

11. Press **Enter** for no label or enter one if desired.
12. Copy any files you saved in step 9 back to your USB flash media device.
13. Remove the diskette and reboot the computer. The computer will boot to the USB flash media device as drive C.



NOTE The default boot order varies from computer to computer, and it can be changed in the Computer Setup (F10) Utility.

If you have used a DOS version from Windows 9x, you may see a brief Windows logo screen. If you do not want this screen, add a zero-length file named LOGO.SYS to the root directory of the USB flash media device.

Return to [Copying to Multiple Computers](#).

Unsupported USB Flash Media Device

To create a bootable USB flash media device, you must have:

- a USB flash media device
- a bootable DOS diskette with the FDISK and SYS programs (If SYS is not available, FORMAT may be used, but all existing files on the USB flash media device will be lost.)
- a PC that is bootable from a USB flash media device



CAUTION Some older PCs may not be bootable from a USB flash media device. If the default boot order in the Computer Setup (F10) Utility lists the USB device before the hard drive, the computer can be booted from a USB flash media device. Otherwise, a bootable diskette must be used.

1. If there are any PCI cards in the system that have SCSI, ATA RAID or SATA drives attached, turn off the computer and unplug the power cord.



CAUTION The power cord **MUST** be unplugged.

2. Open the computer and remove the PCI cards.

3. Insert the USB flash media device into one of the computer's USB ports and remove all other USB storage devices except USB diskette drives. Close the computer cover.
4. Plug in the power cord and turn on the computer.
5. As soon as the computer is turned on, press **F10** when the monitor light turns green to enter Computer Setup. Press **Enter** to bypass the title screen, if necessary.



NOTE If you do not press **F10** at the appropriate time, you must restart the computer and again press **F10** when the monitor light turns green to access the utility.

6. Go to **Advanced > PCI Devices** to disable both the PATA and SATA controllers. When disabling the SATA controller, note the IRQ to which the controller is assigned. You will need to reassign the IRQ later. Exit setup, confirming the changes.

SATA IRQ: _____

7. Insert a bootable DOS diskette with FDISK.COM and either SYS.COM or FORMAT.COM into a diskette drive and turn on the computer to boot to the DOS diskette.
8. Run FDISK and delete any existing partitions on the USB flash media device. Create a new partition and mark it active. Exit FDISK by pressing the **Esc** key.
9. If the system did not automatically restart when exiting FDISK, press **Ctrl+Alt+Del** to reboot to the DOS diskette.
10. At the **A:** prompt, type `FORMAT C: /S` and press **Enter**. Format will format the USB flash media device, add the system files, and ask for a Volume Label.
11. Press **Enter** for no label or enter one if desired.
12. Turn off the computer and unplug the power cord. Open the computer and re-install any PCI cards that were previously removed. Close the computer cover.
13. Plug in the power cord, remove the diskette, and turn on the computer.
14. As soon as the computer is turned on, press **F10** when the monitor light turns green to enter Computer Setup. Press **Enter** to bypass the title screen, if necessary.
15. Go to **Advanced > PCI Devices** and re-enable the PATA and SATA controllers that were disabled in step 6. Put the SATA controller on its original IRQ.
16. Save the changes and exit. The computer will boot to the USB flash media device as drive C.



NOTE The default boot order varies from computer to computer, and it can be changed in the Computer Setup (F10) Utility. Refer to the *Computer Setup (F10) Utility Guide* on the *Documentation and Diagnostics CD* for instructions.

If you have used a DOS version from Windows 9x, you may see a brief Windows logo screen. If you do not want this screen, add a zero-length file named LOGO.SYS to the root directory of the USB flash media device.

Return to [Copying to Multiple Computers](#).

Dual-State Power Button

With Advanced Configuration and Power Interface (ACPI) enabled, the power button can function either as an on/off switch or as a standby button. The standby feature does not completely turn off power, but instead causes the computer to enter a low-power standby state. This allows you to power down quickly without closing applications and to return quickly to the same operational state without any data loss.

To change the power button's configuration, complete the following steps:

1. Left click on the **Start Button**, then select **Control Panel > Power Options**.
2. In the **Power Options Properties**, select the **Advanced** tab.
3. In the **Power Button** section, select **Stand by**.

After configuring the power button to function as a standby button, press the power button to put the system in a very low power state (standby). Press the button again to quickly bring the system out of standby to full power status. To completely turn off all power to the system, press and hold the power button for four seconds.



CAUTION Do not use the power button to turn off the computer unless the system is not responding; turning off the power without operating system interaction could cause damage to or loss of data on the hard drive.

HP Web Site Support

HP engineers rigorously test and debug software developed by HP and third-party suppliers, and develop operating system specific support software, to ensure performance, compatibility, and reliability for HP computers.

When making the transition to new or revised operating systems, it is important to implement the support software designed for that operating system. If you plan to run a version of Microsoft Windows that is different from the version included with the computer, you must install corresponding device drivers and utilities to ensure that all features are supported and functioning properly.

HP has made the task of locating, accessing, evaluating, and installing the latest support software easier. You can download the software from <http://www.hp.com/support>.

The Web site contains the latest device drivers, utilities, and flashable ROM images needed to run the latest Microsoft Windows operating system on the HP computer.

Industry Standards

HP management solutions integrate with other systems management applications, and are based on industry standards, such as:

- Web-Based Enterprise Management (WBEM)
- Windows Management Interface (WMI)
- Wake on LAN Technology
- ACPI

- SMBIOS
- Pre-boot Execution (PXE) support

Asset Tracking and Security

Asset tracking features incorporated into the computer provide key asset tracking data that can be managed using HP Systems Insight Manager, HP Client Manager, HP OpenView Configuration Management and Asset Management solutions, or other system management applications. Seamless, automatic integration between asset tracking features and these products enables you to choose the management tool that is best suited to the environment and to leverage the investment in existing tools.

HP also offers several solutions for controlling access to valuable components and information. HP Embedded Security for ProtectTools, if installed, prevents unauthorized access to data and checks system integrity and authenticates third-party users attempting system access. (For more information, refer to the *HP ProtectTools Security Manager Guide* at www.hp.com.) Security features such as HP Embedded Security for ProtectTools, the Smart Cover Sensor and the Smart Cover Lock, available on some models, help to prevent unauthorized access to the internal components of the personal computer. By disabling parallel, serial, or USB ports, or by disabling removable media boot capability, you can protect valuable data assets. Memory Change and Smart Cover Sensor alerts can be automatically forwarded to system management applications to deliver proactive notification of tampering with a computer's internal components.



NOTE HP Embedded Security for ProtectTools, the Smart Cover Sensor, and the Smart Cover Lock are available as options on some systems.

Use the following utilities to manage security settings on the HP computer:

- Locally, using the Computer Setup Utilities. See the *Computer Setup (F10) Utility Guide* on the *Documentation and Diagnostics CD* included with the computer for additional information and instructions on using the Computer Setup Utilities. Some computers also have HP BIOS Configuration for ProtectTools, which is a Windows-based component of ProtectTools that allows administrators to configure BIOS security settings from within the running OS.
- Remotely, using HP Client Manager Software or System Software Manager. This software enables the secure, consistent deployment and control of security settings from a simple command-line utility.

The following table and sections refer to managing security features of the computer locally through the Computer Setup (F10) Utilities.

Table 1 Security Features Overview


Option	Description
Setup Password	Allows you to set and enable setup (administrator) password.
	 <p>NOTE If the setup password is set, it is required to change Computer Setup options, flash the ROM, and make changes to certain plug and play settings under Windows.</p> <p>See the <i>Computer Setup (F10) Utility Guide</i> on the <i>Documentation and Diagnostics CD</i> for more information.</p>
Power-On Password	Allows you to set and enable power-on password.

Table 1 Security Features Overview (continued)



Option	Description
	See the <i>Computer Setup (F10) Utility Guide</i> on the <i>Documentation and Diagnostics CD</i> for more information.
Password Options (This selection will appear only if a power-on password is set.)	Allows you to specify whether the password is required for warm boot (Ctrl +Alt+Del). See the <i>Computer Setup (F10) Utility Guide</i> on the <i>Documentation and Diagnostics CD</i> for more information.
Pre-Boot Authorization	Allows you to enable/disable the Smart Card to be used in place of the Power-On Password.
Smart Cover	Allows you to: <ul style="list-style-type: none"> • Enable/disable the Cover Lock. • Enable/disable the Cover Removal Sensor. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;">  <p>NOTE <i>Notify User</i> alerts the user that the sensor has detected that the cover has been removed. <i>Setup Password</i> requires that the setup password be entered to boot the computer if the sensor detects that the cover has been removed.</p> </div> <p>This feature is supported on some models only. See the <i>Computer Setup (F10) Utility Guide</i> on the <i>Documentation and Diagnostics CD</i> for more information.</p>
Embedded Security	Allows you to: <ul style="list-style-type: none"> • Enable/disable the Embedded Security device. • Reset the device to Factory Settings. <p>This feature is supported on some models only. See the <i>HP ProtectTools Security Manager Guide</i> at www.hp.com</p>
Device Security	Enables/disables serial ports, parallel port, front USB ports, system audio, network controllers (some models), and SCSI controllers (some models).
Network Service Boot	Enables/disables the computer's ability to boot from an operating system installed on a network server. (Feature available on NIC models only; the network controller must reside on the PCI bus or be embedded on the system board.)
System IDs	Allows you to set: <ul style="list-style-type: none"> • Asset tag (18-byte identifier) and ownership Tag (80-byte identifier displayed during POST). See the <i>Computer Setup (F10) Utility Guide</i> on the <i>Documentation and Diagnostics CD</i> for more information. • Chassis serial number or Universal Unique Identifier (UUID) number. The UUID can only be updated if the current chassis serial number is invalid. (These ID numbers are normally set in the factory and are used to uniquely identify the system.) <p>Keyboard locale setting (for example, English or German) for System ID entry.</p>
DriveLock (some models)	Allows you to assign or modify a master or user password for ATA hard drives. When this feature is enabled, the user is prompted to provide one of the DriveLock passwords during POST. If neither is successfully entered, the hard drive will remain inaccessible until one of the passwords is successfully provided during a subsequent cold-boot sequence.

Table 1 Security Features Overview (continued)

Option	Description
	 NOTE This selection will only appear when at least one ATA drive that supports the ATA Security command set is attached to the system. See the <i>Computer Setup (F10) Utility Guide</i> on the <i>Documentation and Diagnostics CD</i> for more information.
For more information about Computer Setup, see the <i>Computer Setup (F10) Utility Guide</i> on the <i>Documentation and Diagnostics CD</i> .	
Support for security features may vary depending on the specific computer configuration.	

Password Security

The power-on password prevents unauthorized use of the computer by requiring entry of a password to access applications or data each time the computer is turned on or restarted. The setup password specifically prevents unauthorized access to Computer Setup, and can also be used as an override to the power-on password. That is, when prompted for the power-on password, entering the setup password instead will allow access to the computer.

A network-wide setup password can be established to enable the system administrator to log in to all network systems to perform maintenance without having to know the power-on password, even if one has been established.

Establishing a Setup Password Using Computer Setup

If the system is equipped with an embedded security device, refer to the *HP ProtectTools Security Manager Guide* at www.hp.com. Establishing a setup password through Computer Setup prevents reconsideration of the computer (use of the Computer Setup (F10) utility) until the password is entered.

1. Turn on or restart the computer. If you are in Windows, click **Start > Shut Down > Restart**.
2. As soon as the computer is turned on, press **F10** when the monitor light turns green to enter Computer Setup. Press **Enter** to bypass the title screen, if necessary.



NOTE If you do not press **F10** at the appropriate time, you must restart the computer and again press **F10** when the monitor light turns green to access the utility.

3. Select **Security**, then select **Setup Password** and follow the instructions on the screen.
4. Before exiting, click **File > Save Changes and Exit**.

Establishing a Power-On Password Using Computer Setup

Establishing a power-on password through Computer Setup prevents access to the computer when power is turned on, unless the password is entered. When a power-on password is set, Computer Setup presents **Password Options** under the **Security** menu. Password options include **Password Prompt**

on Warm Boot. When **Password Prompt on Warm Boot** is enabled, the password must also be entered each time the computer is rebooted.

1. Turn on or restart the computer. If you are in Windows, click **Start > Shut Down > Restart**.
2. As soon as the computer is turned on, press **F10** when the monitor light turns green to enter Computer Setup. Press **Enter** to bypass the title screen, if necessary.



NOTE If you do not press **F10** at the appropriate time, you must restart the computer and again press **F10** when the monitor light turns green to access the utility.

3. Select **Security**, then **Power-On Password** and follow the instructions on the screen.
4. Before exiting, click **File > Save Changes and Exit**.

Entering a Power-On Password

To enter a power-on password, complete the following steps:

1. Turn on or restart the computer. If you are in Windows, click **Start > Shut Down > Restart the Computer**.
2. When the key icon appears on the monitor, type the current password, then press **Enter**.



NOTE Type carefully; for security reasons, the characters you type do not appear on the screen.

If you enter the password incorrectly, a broken key icon appears. Try again. After three unsuccessful tries, you must turn off the computer, then turn it on again before you can continue.

Entering a Setup Password

If the system is equipped with an embedded security device, refer to the *HP ProtectTools Security Manager Guide* at www.hp.com.

If a setup password has been established on the computer, you will be prompted to enter it each time you run Computer Setup.

1. Turn on or restart the computer. If you are in Windows, click **Start > Shut Down > Restart**.
2. As soon as the computer is turned on, press **F10** when the monitor light turns green to enter Computer Setup. Press **Enter** to bypass the title screen, if necessary.



NOTE If you do not press **F10** at the appropriate time, you must restart the computer and again press **F10** when the monitor light turns green to access the utility.

3. When the key icon appears on the monitor, type the setup password, then press **Enter**.



NOTE Type carefully; for security reasons, the characters you type do not appear on the screen.

If you enter the password incorrectly, a broken key icon appears. Try again. After three unsuccessful tries, you must turn off the computer, then turn it on again before you can continue.

Changing a Power-On or Setup Password

If the system is equipped with an embedded security device, refer to the *HP ProtectTools Security Manager Guide* at www.hp.com.

1. Turn on or restart the computer. If you are in Windows, click **Start > Shut Down > Restart the Computer**.
2. To change the Power-On password, go to step 3.

To change the Setup password, as soon as the computer is turned on, press **F10** when the monitor light turns green to enter Computer Setup. Press **Enter** to bypass the title screen, if necessary.



NOTE If you do not press **F10** at the appropriate time, you must restart the computer and again press **F10** when the monitor light turns green to access the utility.

3. When the key icon appears, type the current password, a slash (/) or alternate delimiter character, the new password, another slash (/) or alternate delimiter character, and the new password again as shown: `current password/new password/new password`



NOTE Type carefully; for security reasons, the characters you type do not appear on the screen.

4. Press **Enter**.

The new password takes effect the next time you turn on the computer.



NOTE Refer to the [National Keyboard Delimiter Characters](#) for information about the alternate delimiter characters. The power-on password and setup password may also be changed using the Security options in Computer Setup.

Deleting a Power-On or Setup Password

If the system is equipped with an embedded security device, refer to the *HP ProtectTools Security Manager Guide* at www.hp.com.

1. Turn on or restart the computer. If you are in Windows, click **Start > Shut Down > Restart the Computer**.
2. To delete the Power-On password, go to step 3.

To delete the Setup password, as soon as the computer is turned on, press **F10** when the monitor light turns green to enter Computer Setup. Press **Enter** to bypass the title screen, if necessary.



NOTE If you do not press **F10** at the appropriate time, you must restart the computer and again press **F10** when the monitor light turns green to access the utility.

3. When the key icon appears, type the current password followed by a slash (/) or alternate delimiter character as shown: `current password/`
4. Press **Enter**.



NOTE Refer to [National Keyboard Delimiter Characters](#) for information about the alternate delimiter characters. The power-on password and setup password may also be changed using the Security options in Computer Setup.

National Keyboard Delimiter Characters

Each keyboard is designed to meet country-specific requirements. The syntax and keys that you use to change or delete the password depend on the keyboard that came with the computer.

National Keyboard Delimiter Characters					
Arabic	/	Greek	-	Russian	/
Belgian	=	Hebrew	.	Slovakian	-
BHCSY*	-	Hungarian	-	Spanish	-
Brazilian	/	Italian	-	Swedish/Finnish	/
Chinese	/	Japanese	/	Swiss	-
Czech	-	Korean	/	Taiwanese	/
Danish	-	Latin American	-	Thai	/
French	!	Norwegian	-	Turkish	.
French Canadian	é	Polish	-	U.S. English	/
German	-	Portuguese	-		

* For Bosnia-Herzegovina, Croatia, Slovenia, and Yugoslavia

Clearing Passwords

If you forget the password, you cannot access the computer. Refer to the *Troubleshooting Guide* on the *Documentation and Diagnostics CD* for instructions on clearing passwords.

If the system is equipped with an embedded security device, refer to the *HP ProtectTools Security Manager Guide* at www.hp.com.

DriveLock

DriveLock is an industry-standard security feature that prevents unauthorized access to the data on ATA hard. DriveLock has been implemented as an extension to Computer Setup. It is only available when hard drives that support the ATA Security command set are detected. DriveLock is intended for HP customers for whom data security is the paramount concern. For such customers, the cost of the hard drive and the loss of the data stored on it is inconsequential when compared with the damage that could result from unauthorized access to its contents. In order to balance this level of security with the practical need to accommodate a forgotten password, the HP implementation of DriveLock employs a two-password security scheme. One password is intended to be set and used by a system administrator while the other is typically set and used by the end-user. There is no "back-door" that can be used to unlock the drive if both passwords are lost. Therefore, DriveLock is most safely used when the data contained on the hard drive is replicated on a corporate information system or is regularly backed up. In the event that both DriveLock passwords are lost, the hard drive is rendered unusable. For users who do not fit the previously defined customer profile, this may be an unacceptable risk. For users who do fit the customer profile, it may be a tolerable risk given the nature of the data stored on the hard drive.

Using DriveLock

When one or more hard drives that support the ATA Security command set are detected, the DriveLock option appears under the Security menu in Computer Setup. The user is presented with options to set the master password or to enable DriveLock. A user password must be provided in order to enable

DriveLock. Since the initial configuration of DriveLock is typically performed by a system administrator, a master password should be set first. HP encourages system administrators to set a master password whether they plan to enable DriveLock or keep it disabled. This will give the administrator the ability to modify DriveLock settings if the drive is locked in the future. Once the master password is set, the system administrator may enable DriveLock or choose to keep it disabled.

If a locked hard drive is present, POST will require a password to unlock the device. If a power-on password is set and it matches the device's user password, POST will not prompt the user to re-enter the password. Otherwise, the user will be prompted to enter a DriveLock password. On a cold boot, either the master or the user password may be used. On a warm boot, enter the same password used to unlock the drive during the preceding cold-boot. Users will have two attempts to enter a correct password. On a cold boot, if neither attempt succeeds, POST will continue but the drive will remain inaccessible. On a warm boot or restart from Windows, if neither attempt succeeds, POST will halt and the user will be instructed to cycle power.

DriveLock Applications

The most practical use of the DriveLock security feature is in a corporate environment. The system administrator would be responsible for configuring the hard drive which would involve, among other things, setting the DriveLock master password and a temporary user password. In the event that the user forgets the user password or the equipment is passed on to another employee, the master password can always be used to reset the user password and regain access to the hard drive.

HP recommends that corporate system administrators who choose to enable DriveLock also establish a corporate policy for setting and maintaining master passwords. This should be done to prevent a situation where an employee intentionally or unintentionally sets both DriveLock passwords before leaving the company. In such a scenario, the hard drive would be rendered unusable and require replacement. Likewise, by not setting a master password, system administrators may find themselves locked out of a hard drive and unable to perform routine checks for unauthorized software, other asset control functions, and support.


For users with less stringent security requirements, HP does not recommend enabling DriveLock. Users in this category include personal users or users who do not maintain sensitive data on their hard drives as a common practice. For these users, the potential loss of a hard drive resulting from forgetting both passwords is much greater than the value of the data DriveLock has been designed to protect. Access to Computer Setup and DriveLock can be restricted through the Setup password. By specifying a Setup password and not giving it to end users, system administrators are able to restrict users from enabling DriveLock.

Smart Cover Sensor

CoverRemoval Sensor, available on some models, is a combination of hardware and software technology that can alert you when the computer cover or side panel has been removed. There are three levels of protection, as described in the following table.

Table 2 Smart Cover Sensor Protection Levels

Level	Setting	Description
Level 0	Disabled	Smart Cover Sensor is disabled (default).
Level 1	Notify User	When the computer is restarted, the screen displays a message indicating that the computer cover or side panel has been removed.
Level 2	Setup Password	When the computer is restarted, the screen displays a message indicating that the computer cover or side panel has been removed. You must enter the setup password to continue.

 **NOTE** These settings can be changed using Computer Setup. For more information about Computer Setup, see the *Computer Setup (F10) Utility Guide* on the *Documentation and Diagnostics CD*.

Setting the Smart Cover Sensor Protection Level

To set the Smart Cover Sensor protection level, complete the following steps:

1. Turn on or restart the computer. If you are in Windows, click **Start > Shut Down > Restart**.
2. As soon as the computer is turned on, press **F10** when the monitor light turns green to enter Computer Setup. Press **Enter** to bypass the title screen, if necessary.



NOTE If you do not press **F10** at the appropriate time, you must restart the computer and again press **F10** when the monitor light turns green to access the utility.

3. Select **Security > Smart Cover > Cover Removal Sensor**, and select the desired security level.
4. Before exiting, click **File > Save Changes and Exit**.

Smart Cover Lock

The Smart Cover Lock is a software-controllable cover lock featured on some HP computers. This lock prevents unauthorized access to the internal components. Computers ship with the Smart Cover Lock in the unlocked position.



CAUTION For maximum cover lock security, be sure to establish a setup password. The setup password prevents unauthorized access to the Computer Setup utility.



NOTE The Smart Cover Lock is available as an option on some systems.

Locking the Smart Cover Lock

To activate and lock the Smart Cover Lock, complete the following steps:

1. Turn on or restart the computer. If you are in Windows, click **Start > Shut Down > Restart**.
2. As soon as the computer is turned on, press **F10** when the monitor light turns green to enter Computer Setup. Press **Enter** to bypass the title screen, if necessary.



NOTE If you do not press **F10** at the appropriate time, you must restart the computer and again press **F10** when the monitor light turns green to access the utility.

3. Select **Security > Smart Cover > Cover Lock > Lock option**.
4. Before exiting, click **File > Save Changes and Exit**.

Unlocking the Smart Cover Lock

1. Turn on or restart the computer. If you are in Windows, click **Start > Shut Down > Restart**.
2. As soon as the computer is turned on, press **F10** when the monitor light turns green to enter Computer Setup. Press **Enter** to bypass the title screen, if necessary.



NOTE If you do not press **F10** at the appropriate time, you must restart the computer and again press **F10** when the monitor light turns green to access the utility.

3. Select **Security > Smart Cover > Cover Lock > Unlock**.
4. Before exiting, click **File > Save Changes and Exit**.

Using the Smart Cover FailSafe Key

If you enable the Smart Cover Lock and cannot enter the password to disable the lock, you will need a Smart Cover FailSafe Key to open the computer cover. You will need the key in any of the following circumstances:

- Power outage
- Startup failure
- PC component failure (such as processor or power supply)
- Forgotten password



CAUTION The Smart Cover FailSafe Key is a specialized tool available from HP. Be prepared; order this key before you need one at an authorized reseller or service provider.

To obtain the FailSafe Key, do any one of the following:

- Contact an authorized HP reseller or service provider.
- Call the appropriate number listed in the warranty.

For more information about using the Smart Cover FailSafe Key, consult the *Hardware Reference Guide* on the *Documentation and Diagnostics CD*.

Cable Lock Provision

The rear panel of the computer accommodates a cable lock so that the computer can be physically secured to a work area.

For illustrated instructions, please see the *Hardware Reference Guide* on the *Documentation and Diagnostics CD*.

Fingerprint Identification Technology

Eliminating the need to enter user passwords, HP Fingerprint Identification Technology tightens network security, simplifies the login process, and reduces the costs associated with managing corporate networks. Affordably priced, it is not just for high-tech, high-security organizations anymore.



NOTE Support for Fingerprint Identification Technology varies by model.

For more information, visit:

<http://h18004.www1.hp.com/products/security/>.

Fault Notification and Recovery

Fault Notification and Recovery features combine innovative hardware and software technology to prevent the loss of critical data and minimize unplanned downtime.

If the computer is connected to a network managed by HP Client Manager, the computer sends a fault notice to the network management application. With HP Client Manager Software, you can also remotely schedule diagnostics to automatically run on all managed PCs and create a summary report of failed tests.

Drive Protection System

The Drive Protection System (DPS) is a diagnostic tool built into the hard drives installed in some HP computers. DPS is designed to help diagnose problems that might result in unwarranted hard drive replacement.

When HP computers are built, each installed hard drive is tested using DPS, and a permanent record of key information is written onto the drive. Each time DPS is run, test results are written to the hard drive. The service provider can use this information to help diagnose conditions that caused you to run the DPS software. Refer to the *Troubleshooting Guide* on the *Documentation and Diagnostics CD* for instructions on using DPS.

Surge-Tolerant Power Supply

An integrated surge-tolerant power supply provides greater reliability when the computer is hit with an unpredictable power surge. This power supply is rated to withstand a power surge of up to 2000 volts without incurring any system downtime or data loss.

Thermal Sensor

The thermal sensor is a hardware and software feature that tracks the internal temperature of the computer. This feature displays a warning message when the normal range is exceeded, which gives you time to take action before internal components are damaged or data is lost.

Index

A

- access to computer, controlling 18
- Active Management Technology, Intel vPro-branded PCs with 8
- Altiris
 - AClient 2
 - Deployment Solution Agent 2
- asset tracking 18

B

- Backup and Recovery Manager 3
- BIOS
 - Boot Block Emergency Recovery Mode 11
 - HPQFlash 11
 - Remote ROM Flash 11
- Boot Block Emergency Recovery Mode 11
- bootable device
 - creating 14
 - DiskOnKey 14, 15
 - HP Drive Key 14, 15
 - USB flash media device 14

C

- cable lock provision 27
- cautions
 - cover lock security 25
 - FailSafe Key 26
 - protecting ROM 10
- change notification 10
- changing operating systems, important information 17
- changing password 22
- clearing password 23
- Client Foundation Suite 7
- Client Management Interface 4
- Client Management Premium Suite 6

- Client Manager 5
- cloning tools, software 1
- Computer Setup Utilities 12
- configuring power button 17
- controlling access to
 - computer 18
 - cover lock 25
 - cover lock security, caution 25
 - customizing software 1

D

- deleting password 22
- delimiter characters, table 23
- deployment tools, software 1
- diagnostic tool for hard drives 27
- disk, cloning 1
- DiskOnKey
 - bootable 14, 15
 - HP Drive Key 14
- drive, protecting 27
- DriveLock
 - applications 24
 - using 23
- dual-state power button 17

E

- Emergency Recovery Mode, Boot Block 11
- entering
 - power-on password 21
 - setup password 21

F

- FailSafe Key
 - caution 26
 - ordering 26
- Fault Notification and Recovery HP Client Manager 27
- fingerprint identification technology 27

H

- hard drives, diagnostic tool 27
- HP
 - Backup and Recovery Manager 3
 - Client Foundation Suite 7
 - Client Management Interface 4
 - Client Management Premium Suite 6
 - Client Manager 5
 - OpenView (Radia) 2
 - OpenView Client Configuration Manager 7
 - OpenView Management Suite 7
 - ProtectTools Security Manager 6
 - System Software Manager 5
- HP Drive Key
 - bootable 14, 15
 - DiskOnKey 14
- HP Lifecycle solutions 1
- HPQFlash 11

I

- industry standards 17
- initial configuration 1
- Intel vPro-branded PCs with Active Management Technology 8
- internal temperature of computer 27
- Internet addresses. See Web sites

K

- keyboard delimiter characters, national 23

L

- locking Smart Cover Lock 26

- N**
- national keyboard delimiter characters 23
- notification of changes 10
- O**
- OpenView Client Configuration Manager 7
- OpenView Management Suite 7
- operating systems, important information about 17
- ordering FailSafe Key 26
- P**
- password
 - changing 22
 - clearing 23
 - deleting 22
 - power-on 20, 21
 - security 20
 - setup 20, 21
- PC deployment 1
- PCN (Proactive Change Notification) 10
- power button
 - configuring 17
 - dual-state 17
- power supply, surge-tolerant 27
- power-on password
 - changing 22
 - deleting 22
 - entering 21
 - setting 20
- Preboot Execution Environment (PXE) 4
- preinstalled software image 1
- Proactive Change Notification (PCN) 10
- protecting hard drive 27
- protecting ROM, caution 10
- ProtectTools Security Manager 6
- PXE (Preboot Execution Environment) 4
- R**
- Radia (HP OpenView) 2
- Radia Management Agent 2
- Recovery Mode, Boot Block Emergency 11
- recovery, software 1
- Remote ROM Flash 11
- remote setup 4
- Remote System Installation 4
- retired solutions 10
- ROM
 - flash 10
 - Remote Flash 11
- S**
- security
 - cable lock 27
 - DriveLock 23
 - features, table 18
 - fingerprint identification technology 27
 - password 20
 - ProtectTools Security Manager 6
 - settings 18
 - Smart Cover Lock 25
 - Smart Cover Sensor 25
- setup
 - copying to multiple computers 13
 - copying to single computer 12
 - initial 1
 - replicating 12
- setup password
 - changing 22
 - deleting 22
 - entering 21
 - setting 20
- Smart Cover FailSafe Key, ordering 26
- Smart Cover Lock
 - FailSafe Key 26
 - locking 26
 - unlocking 26
- Smart Cover Sensor
 - protection levels 25
 - setting 25
- software
 - Active Management Technology 8
 - Altiris AClient 2
 - Altiris Deployment Solution Agent 2
 - asset tracking 18
 - Drive Protection System 27
 - HP Backup and Recovery Manager 3
- HP Client Foundation Suite 7
- HP Client Management Interface 4
- HP Client Management Premium Suite 6
- HP Client Manager 5
- HP OpenView (Radia) 2
- HP OpenView Client Configuration Manager 7
- HP ProtectTools Security Manager 6
- HP System Software Manager 5
- integration 1
- OpenView Management Suite 7
- Radia (HP OpenView) 2
- recovery 1
- Remote System Installation 4
- Restore Plus! 3
- updating and management tools 4
- Subscriber's Choice 10
- surge-tolerant power supply 27
- System Software Manager 5
- T**
- temperature, internal computer 27
- thermal sensor 27
- U**
- unlocking Smart Cover Lock 26
- URLs (Web sites). *See* Web sites
- USB flash media device, bootable 14, 15
- W**
- Web sites
 - BIOS download 10
 - Fingerprint Identification Technology 27
 - HP Client Foundation Suite 7
 - HP Client Foundation Suite and Client Premium Suite 2
 - HP Client Management Premium Suite 7
 - HP Client Manager 6
 - HP OpenView Client Configuration Manager 7

HP OpenView Configuration
Management Solutions 2
HP OpenView Management
Suite for Desktops using
Radia 8
HP ProtectTools Security
Manager 6
HP white papers 8
HPQFlash 11
Intel vPro technology 8
PC deployment 2
Proactive Change
Notification 10
Remote ROM Flash 11
replicating setup 13
Restore Plus! 3
ROM Flash 10
software support 17
Subscriber's Choice 10
Subscriber's Choice 10
System Software Manager
download 5
white papers 8

